

 
INTENDED USE

This table summarizes the radius of our SPB-RF60 Flexi Riser FR1 to FR4.


Use this guide to identify how many segments you need for your given radius requirements.

For installation instructions please see ØI-RD-UG-EN-0389.

Description	#	Radius of Riser (mm)							
		90°		60°		45°		30°	
		Inside Riser	Outside Riser	Inside Riser	Outside Riser	Inside Riser	Outside Riser	Inside Riser	Outside Riser
SPB-RF60 FR1	1	330	270	500	440	660	600	980	920
SPB-RF60 FR2	2	500	440	740	680	980	920	1460	1400
SPB-RF60 FR3	3	660	600	980	920	1300	1240	1940	1880
SPB-RF60 FR4	4	820	760	1220	1160	1620	1560	2410	2360

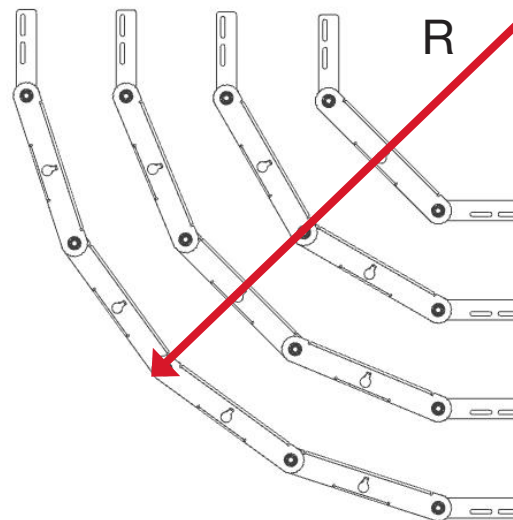

Inside riser 90° - FR1 to FR4

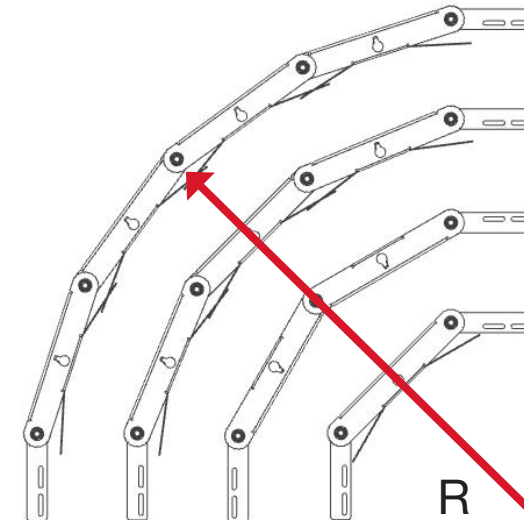 

Outside riser 90° - FR1 to FR4