

INTENDED USE

Pair of brackets to support rectangular HVAC ducting directly on Mekano® channels or frames. Suitable for both insulated and non-insulated ducting.

For ducting in widths over 1 m, an extra support should be considered to avoid the ducting sagging in the centre.

INSTRUCTION FOR USE

Decide the position of the brackets according to the ducting width, and attach using self locking bolts. Adjust as necessary and tighten securely.


The channel can be insulated from the brackets by applying insulation pads or tape to the top of the contact points.

Attach the ducting to the brackets using proprietary straps (not supplied), for example type Band-it AE-416 / AE436 with lock 456.



User Guide for Bolts:
Recommended Torque

Supplied in pairs complete with self locking bolts.

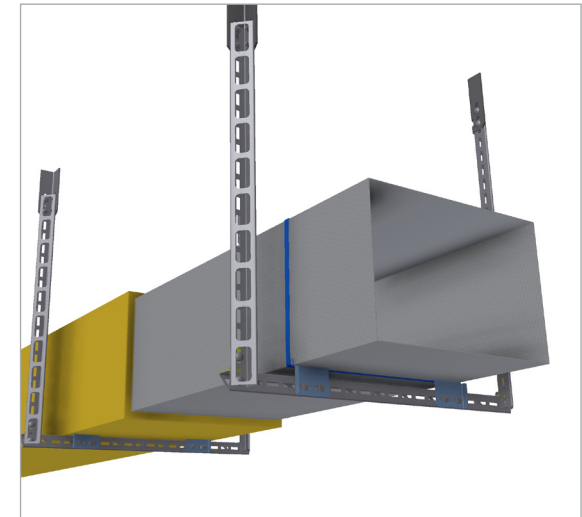

Bend the tab flat to use the bracket also as a support in the centre to prevent sagging on wide ductings.

